 


# M101BK

## Rugged Windows Tablet

Intel® Quad-Core™ N2930 Bay Trail-M

Windows 10 IoT Enterprise

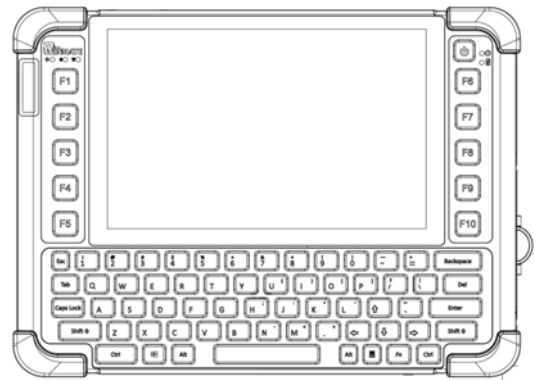

## Quick Start Guide

---

## Contents

<b>Read Me First</b>	<b>3</b>
Advisory Conventions	3
Safety Information	4
Handling and Maintenance	5
<b>Introduction</b>	<b>7</b>
Unpacking	7
Description of Parts	8
Indicators	10
Hotkey for Specific Functions	10
<b>Getting Started</b>	<b>11</b>
Installing Battery	11
Charging Your Tablet	11
Starting the Tablet	12
<b>Operating the Device</b>	<b>13</b>
Using Winset Utility	13
Using the Camera	13
Using Bluetooth	14
Using Wi-Fi	15
Using WWAN	17
Scanning Barcodes	17
Replacing Hot Swappable Battery	18
<b>Basic Troubleshooting</b>	<b>19</b>

# Read Me First

## Advisory Conventions

Four types of advisories are used throughout the user manual to provide helpful information or to alert you to the potential for hardware damage or personal injury.



### Note:

A note is used to emphasize helpful information



### Important:

An important note indicates information that is important for you to know.



### Caution/ Attention

A Caution alert indicates potential damage to hardware and explains how to avoid the potential problem.

[FR] Une alerte d'attention indique un dommage possible à l'équipement et explique comment éviter le problème potentiel.



### Warning!/Avertissement!

An Electrical Shock Warning indicates the potential harm from electrical hazards and how to avoid the potential problem.

[FR] Un Avertissement de Choc Électrique indique le potentiel de choc sur des emplacements électriques et comment éviter ces problèmes.

## FCC Statement



This device complies with part 15 FCC rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received including interference that may cause undesired operation

This equipment has been tested and found to comply with the limits for a class "B" digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

## CE Notice (European Union)



Electromagnetic Compatibility Directive (2014/30/EU)

- EN55024: 2010/ A1: 2015
  - IEC61000-4-2: 2009
  - IEC61000-4-3: 2006+A1: 2007+A2: 2010
  - IEC61000-4-4: 2012
  - IEC61000-4-5: 2014
  - IEC61000-4-6: 2014
  - IEC61000-4-8: 2010
  - IEC61000-4-11: 2004
- EN55032: 2012/AC:2013
- EN61000-3-2:2014
- EN61000-3-3:2013

Low Voltage Directive (2014/35/EU)

- EN 60950-1:2006/A11:2009/A1:2010/A12:2011/ A2:2013

This equipment is in conformity with the requirement of the following EU legislations and harmonized standards. Product also complies with the Council directions.

## Safety Information



### Precaution on Battery Pack *Précaution avec le bloc-pile*

Do Not Disassemble, Modify, or Insert Sharp Objects Into the Battery Pack. Electrolyte leakage, generation of heat, ignition or rupture may result.  
*[FR] Ne pas démonter, modifier, ou insérer des objets pointus à l'intérieur du bloc-pile. Une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.*

Do Not Short the Positive (+) and Negative (-) Terminals of the Battery. Generation of heat, ignition or rupture may result. When carrying or storing the device, do not place the battery pack together with articles that may contact electricity.  
*[FR] Ne pas court-circuiter les bornes Positive (+) et Négative (-) de la pile, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés. Lors du transport et du rangement de l'appareil, ne pas placer le bloc-pile en même temps que des articles pouvant créer un contact électrique.*

Do Not Apply Shocks to the Battery by Dropping It or Applying Strong Pressure to It. Electrolyte leakage, generation of heat, ignition or rupture of battery may occur.  
*[FR] Ne pas faire subir de choc à la pile en la laissant tomber ou en appliquant une forte pression dessus. Une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.*

Do Not Charge the Battery Other Than Methods Those Specified In This Manual. If the battery is not charged using one of the specified methods, electrolyte leakage, generation of heat, ignition or rupture may result.  
*[FR] Ne pas charger la pile par d'autres méthodes que celles spécifiées dans ce manuel. Si la pile n'est pas chargée en utilisant l'une des méthodes spécifiées, une fuite d'électrolyte, la génération de chaleur, l'amorçage ou la rupture peuvent être occasionnés.*

When the Battery Pack Has Deteriorated, Replace It with a New Battery. Continued use of a damaged battery pack may result in heat generation, ignition or battery rupture.  
*[FR] Lorsque la pile est détériorée, la remplacer par une nouvelle pile. L'utilisation continue d'une pile endommagée peut occasionner une génération de chaleur, l'amorçage ou la rupture de la pile.*

Do Not Expose the Battery Pack to Excessive Heat, or Extreme Heat (Near Fire, in Direct Sunlight for example) Generation of heat, ignition or rupture may result

*[FR] Ne pas exposer le bloc-pile à une Chaleur Excessive, ou une Chaleur Extrême (Près d'un feu, sous la lumière du soleil par exemple) Une production de chaleur, l'amorçage ou la rupture peuvent être occasionnés*

Do Not Use the Battery Pack With Any Other Products. The battery pack is rechargeable and is only designed for this specific product. If it is used with a product other than the specified product, electrolyte leakage, generation of heat, ignition or rupture may result.

*[FR] Ne pas utiliser avec un autre produit La batterie est rechargeable et a été conçue pour un produit spécifique. Si elle est utilisée sur un produit différent de celui pour lequel elle a été conçue, des pertes d'électrolytes et une production de chaleur sont possibles, elle risque également de prendre feu ou de casser.*

Do Not Use This Product With Battery Other Than the One Specified.

*[FR] Ne pas utiliser ce produit avec une batterie autre que celle spécifiée*

Discontinue using device immediately if you notice the battery is swelling, or looks puffy or misshapen. Do not attempt to charge or use the device. Do not handle a damaged or leaking battery. Do not let leaking battery fluid come into contact with your eyes, skin or clothing.

*[FR] Si vous remarquez une pile gonflée, élargie ou anormale, cesser l'utilisation de l'appareil immédiatement. N'essayez pas de recharger l'appareil ou de l'utiliser. Ne pas manipuler une pile qui fuit ou qui est endommagée. Ne laissez pas de liquide qui fuit entrer en contact avec vos yeux, votre peau ou vos vêtements.*



### General Guideline *Directive générale*

It is recommended to reboot the device when some functions are defect or inactive. If it still can't solve the problems please contact your dealer or agent.

*Il est recommandé de redémarrer l'appareil lorsque certaines fonctions sont défectueuses ou inactives. Si le problème persiste, veuillez contacter votre revendeur ou votre agent.*



### General Product Safety Sécurité générale des produits

- Do not block any ventilation openings. Do not place the product against a wall or in an enclosed space as doing so might impede the flow of cooling air.  
▪ *[FR] Ne pas bloquer les ouvertures de ventilation. Ne pas placer le produit contre un mur ou dans un espace clos de façon à entraver la circulation de l'air de refroidissement.*
- Do not place the product near any heat sources such as radiators, warm air intakes, stoves or other heat-generating devices (including amplifiers or other heat producing equipment).  
▪ *[FR] Ne pas placer le produit près d'une source de chaleur comme des radiateurs, les arrivées d'air chaud, poêles ou autres produits générant de la chaleur (y compris les amplificateurs ou autre équipement produisant de la chaleur.)*
- Protect the power cord from being crushed or pinched, particularly in the area of the plugs, any receptacles used, and the point of exit from the apparatus. Do not break off the ground pin of the power cord.  
▪ *[FR] Empêcher le cordon d'alimentation d'être écrasé ou pincé, en particulier dans les zones de prises, des containers utilisés, et du point de sortie de l'appareil. Ne pas casser la broche de terre du cordon d'alimentation.*
- Do not disregard the safety that a polarized or grounded connection can provide. A polarized connection consists of two plugs, one of which is larger than the other. A grounded connection has two blades and a third one that is grounded. If the main plug provided cannot be inserted into your outlet, consult an electrician to replace your obsolete outlet.  
▪ *[FR] Ne pas ignorer la sécurité qu'une prise polarisée ou une prise de terre peut prévoir. Une prise polarisée se compose de deux fiches, dont l'une est plus large que l'autre. Une prise de terre possède deux lames et une troisième qui est la terre. Si la fiche principale fournie ne peut être insérée dans votre prise, consultez un électricien pour remplacer votre prise obsolète.*
- Use only accessories specified by the manufacturer.  
*[FR] Utiliser uniquement les accessoires spécifiés par le fabricant.*
- This product should not be used near water such as bathtubs, sinks, swimming pools, wet basement, etc.  
*[FR] Ce produit ne doit pas être utilisé près de l'eau comme les baignoires, les éviers, les piscines, les sous-sols humides, etc.*

- Use only with its transport carriage, stand, tripod, console or table specified by the manufacturer or sold with the product. When using a carriage, move the carriage assembly with the product carefully to avoid damage from falling over.  
▪ *[FR] Utiliser uniquement avec son chariot de transport, support, trépied, console ou table spécifiés par le fabricant ou vendu avec le produit. Lors de l'utilisation d'un charriot, déplacez l'ensemble chariot avec le produit avec soin pour éviter tout dommage de chute.*
- Unplug this apparatus during lightning storms or when it is not being used for long periods.  
▪ *[FR] Débrancher cet appareil durant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes.*
- Refer all servicing to qualified service personnel. A technical intervention is required when the apparatus has been damaged in any way, for example if the power cord or plug is damaged, liquid has been spilled or objects have fallen inside the unit, if the product has been exposed to rain or moisture, if it does not operate normally or if it has been dropped.  
▪ *[FR] Confier toute réparation à du personnel qualifié. Une intervention technique est nécessaire lorsque l'appareil a été endommagé de quelque façon, par exemple si le cordon d'alimentation ou la fiche est endommagé, du liquide a été renversé ou des objets sont tombés à l'intérieur de l'unité, si le produit a été exposé à la pluie ou à l'humidité, s'il ne fonctionne pas normalement ou s'il a été jeté.*

## Handling and Maintenance



### General Guideline Guide Général

- Keep the product at least 13 cm (5 inches) away from electrical appliances that can generate a strong magnetic field such as TV, refrigerator, motor, or a large audio speaker.  
*[FR] Garder le produit au moins à 13 cm (5 pouces) de distance des appareils électriques qui peuvent générer un fort champ magnétique comme une télévision, un réfrigérateur, un moteur, ou un important haut-parleur.*
- Do not place heavy objects on top of the tablet computer as this may damage the display.  
*[FR] Ne pas placer d'objets lourds sur le dessus de l'ordinateur tablette cela peut endommager l'écran.*

The screen surface can be easily scratched. Use with care. Do not use paper towels to clean the display but use the included cleaning cloth. Avoid touching it with a pen or pencil.  
 [FR] La surface de l'écran peut être facilement rayée. Utiliser avec précaution. Ne pas utiliser de serviette en papier pour nettoyer l'écran mais utiliser le chiffon de nettoyage inclus. Éviter de toucher avec un stylo ou un crayon.

To maximize the life of the backlight in the display, allow backlight to automatically turn off as a result of power management. Avoid using a screen saver or other software that prevents the power management from working.  
 [FR] Pour maximiser la durée de vie du rétroéclairage de l'écran, autoriser le rétroéclairage résultant de la gestion de l'alimentation. Éviter d'utiliser un économiseur d'écran ou un autre logiciel empêchant la gestion de l'alimentation de fonctionner.



### **Cleaning Guideline** **Guide de nettoyage**

Use a soft cloth moistened with water or a non-alkaline detergent to wipe the exterior of the product.  
 [FR] Utiliser un chiffon doux humidifié avec de l'eau ou un détergeant non alcalin pour essuyer l'extérieur du produit.

Gently wipe the display with a soft, lint-free cloth. Do not use alcohol or detergent on the product.  
 [FR] Essuyer délicatement l'écran avec un chiffon doux non pelucheux. Ne pas utiliser d'alcool ou un détergent sur le produit.



### **Touchscreen Guideline** **Guide de l'écran tactile**

Use your finger or the stylus on the display. Using sharp or metallic object may cause scratches and damage the display, thereby causing errors.  
 [FR] Utiliser votre doigt ou le stylet sur l'écran. L'utilisation d'un objet pointu ou métallique peut provoquer des rayures.

Use a soft cloth to remove dirt on the display. The touchscreen surface has a special protective coating that prevents dirt from sticking to it. Not using a soft cloth may cause damage to the special protective coating on the touchscreen surface. To clean off hard to remove dirt, blow some steam on the particular area and gently wipe away using a soft cloth.  
 [FR] Utiliser un chiffon doux pour enlever la poussière sur l'écran. La surface de l'écran tactile a un revêtement protecteur spécial empêchant la saleté de se coller à lui. Ne pas utiliser un chiffon doux peut endommager le revêtement spécial sur la surface de l'écran tactile. Pour nettoyer les saletés plus difficiles à enlever, souffler de la buée sur la zone particulière et essuyer doucement avec un chiffon doux.

Do not use excessive force on the display. Avoid placing objects on top of the display as this may cause the glass to break.  
 [FR] Ne pas utiliser une force excessive sur l'écran. Éviter de placer des objets au dessus de l'écran cela pourrait provoquer une cassure du verre.

When there is a noticeable discrepancy in the operation of the touchscreen function (your touch does not correlate to the proper location on the screen), recalibrate the touchscreen display.  
 [FR] Lorsqu'il y a un écart sensible dans le fonctionnement de l'écran tactile (votre contact ne correspond pas à la bonne position sur l'écran), recalibrer l'écran tactile.

## Introduction

Congratulations on purchasing Winmate® 10.1-inch Rugged Windows Tablet Computer M101BK.

M101BK is a rugged tablet PC with robust set of features designed to withstand industrial use while providing high tech solutions that increase productivity, improve safety, and reduce operational costs. The processing power comes from Intel's quad core N2930 Bay Trail-M processor paired with genuine Intel graphics for high performance. The tablet features a brilliant, in-plane switching with direct optical bonding projected capacitive touch screen, which is outdoor viewable and offers a 1280 x 800 resolution.

Additionally, the tablet features a QWERTY keypad and function keys for easy data input. Weighing at just 3 pounds (approx. 1350 grams) the M101BK delivers lightweight mobility in a rugged tablet.

### Highlights

- Long battery life with Intel Quad Core N2930 Bay Trail-M Processor
- 8" 1280x800 Wide Viewing Angle with P-Cap Touch
- 5MP Auto-focus camera
- IP65 waterproof and dustproof
- ISO/IEC 9995-3 QWERTY Keypad
- Built-in 802.11 a/b/g/n/ac WiFi + Bluetooth 4.0 combo module
- Optional WWAN module
- Optional 1D/2D Barcode Reader
- Optional HF/UHF RFID Reader  
MIL-STD-810G compliant

## Unpacking

Standard package includes::



 
- **Tablet Computer**  
Varies by specifications




- **Quick Start Guide**  
Part No. 9152101K100S




- **Standard Battery BS101**  
Part No. 98K000A000AC

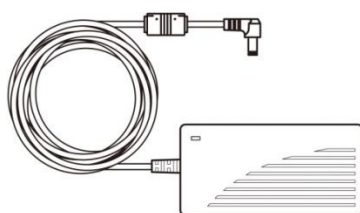

 - **AC Adapter**  
Part No. 922D065W19V1

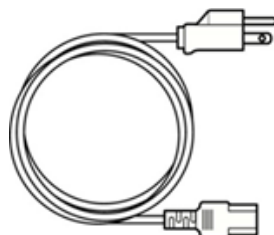

 - **Power Cord and Plugs**  
Varies by country

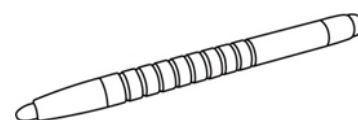


- **Capacitive Touch Stylus**  
Part No. 9B0000000415


Your package may include other optional accessories based on your order.

## Description of Parts

 Front:

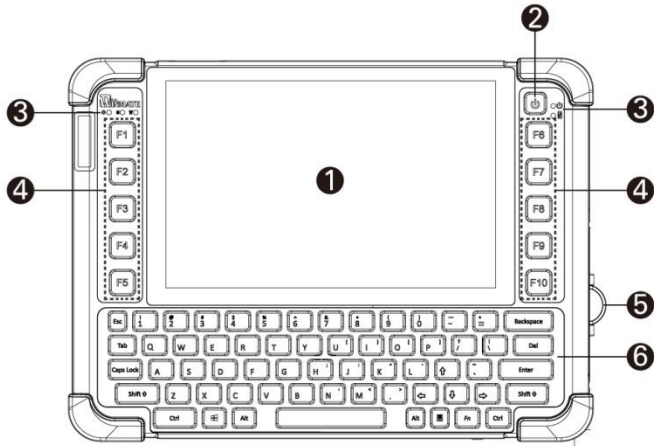

Right:

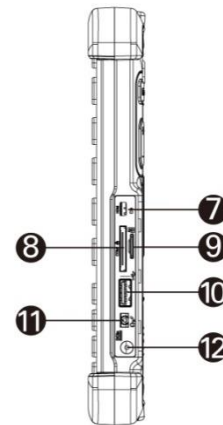 

No	Item	Description
1	Touch Screen	Displays and acts as one of the inputs for the computer.
2	Power Button	Power on/off computer.
3	LED Indicators:	Shows the current status of the computer.
4	Function Buttons	Programmable function keys configured by Winset utility.
5	I/O Cover	Protects I/O ports.
6	QWERTY Keypad	Input characters using the QWERTY keypad.


No	Item	Description
7	Micro HDMI	HDMI output to external display.
8	LAN/RS232	Adapter port for LAN/RS232 connector.
9	MicroSD Card Reader	Memory card reader port for MicroSD Card.
10	USB 3.0	High speed USB port connects to USB devices, such as USB flash drive, mouse, keyboard, printer, etc.
11	Mic In/Line Out	Headset or headphone can be connected (Mic is only supported with 3.5mm 4-pin headset).
12	Power Jack	DC power input jack.

### Front LED Indicators Details:

 Left side




Right side

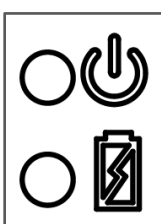





## Rear:

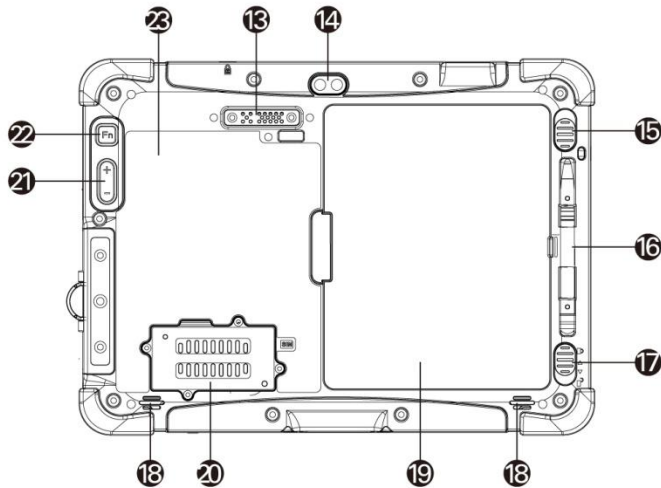 

## Top:

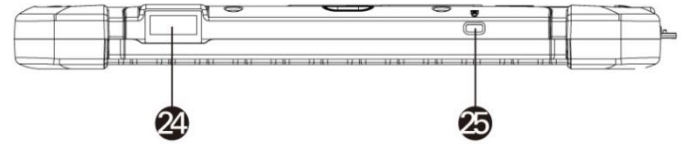 



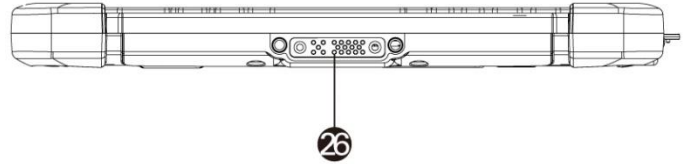 


## Bottom:



No	Item	Description
13	Expansion Port	Provide optional connectivity to custom modules for special application (USB2.0 x 1, RS232 x 1).
14	Rear Camera	5MP Autofocus Camera. Captures photos and videos.
15	Battery Release Slider	Spring-loaded slider that latches the battery in.
16	Touch Pen Slot	Pen holder slot to store touch pen.
17	Battery Lock Latch	Latch to lock the battery in place once battery is inserted. Not spring-loaded.
18	Speakers	Emit sounds.
19	Battery	7.4V, typ. 5140 mAh Li-Polymer Battery (2S1P). 7.4V, typ. 10280 mAh Li-Polymer Battery (2S2P, optional).
20	LTE Module / SIM card slot	Service window to insert Micro SIM card. Also provide access to LTE Module.
21	Volume Buttons	Volume Control. (+) Raise volume, (-) Lower volume.
22	Fn2 Button	Toggles Barcode Scanner
23	Optional HF RFID Reader	Scans HF RFID tags.

No	Item	Description
24	Optional Barcode Reader	Barcode Scanner for reading of 1D/2D barcode.
25	Kensington Lock Port	Provides lock access for Kensington Lock.
26	Docking Connector	Port to docking solutions such as vehicle docking to provide power and external antenna

## Indicators

Item		Description
Power Indicator		<b>Blue</b> – Tablet is ON <b>No light</b> – Tablet is OFF
Battery Status		<b>Orange</b> –AC adapter is plugged in and charging <b>Green</b> –AC adapter is plugged in and battery is full charged <b>Solid Red</b> - Low battery (<10%) <b>Blinking Red</b> – Battery is being hot swapped. <b>No light</b> – Battery is in use and more than 10%
Light Sensor		Light sensor automatically adjusts the panel brightness based on the light settings.
Disk Activity Indicator		Green - Disk Activity No light - Disk Idling
RF Communications		Green - Wi-Fi/BT/WWAN/GPS ON No light - Wi-Fi/BT/WWAN/GPS are all OFF

## Hotkey for Specific Functions

For the physical buttons on the tablet computer, in addition to its dedicated functions detailed in the previous section, it can also be used to emulate commonly used keyboard key strokes. Under different scenario, a single physical button or a combination of physical buttons provide different keyboard key strokes, which are specified below:

### In POST (before Windows boots up):

Buttons	Keystroke
<b>F7</b>	Enters BIOS Setup Screen.
<b>Fn2</b>	ESC
<b>Volume Up (+)</b>	Up
<b>Volume Down (-)</b>	Down

### In Windows:

Buttons	Keystroke
<b>Fn + F1</b>	Opens Win-Set application
<b>Fn + F4</b>	RF Power (Wi-Fi/BT/WWAN/GPS Ant.)
<b>Fn + F5</b>	Camera(Call Winset Cam)
<b>Fn + F7</b>	Zoom +
<b>Fn + F8</b>	Zoom -
<b>Fn + F10</b>	Increase size of on-screen keyboard
<b>Volume Up (+)</b>	Brightness or Volume (Default Brightness)
<b>Volume Down (-)</b>	Brightness or Volume (Default Brightness)
<b>Fn2</b>	Default: Barcode Scan (Configurable)

## Getting Started

 
 
To get started:

1. Install the battery.
2. Charge your tablet.
3. Start the tablet.

## Installing Battery

*To install the battery pack:*

1. Disconnect any cords connected to the tablet computer.
2. Turn the tablet over, back facing up.
3. Locate the Battery Lock Latch and push it to the “Unlocked” position.
4. Locate the Battery Release Slider that is spring-loaded. Pull back and hold.
5. Insert the battery with the connector-pins side first, and then lower the battery into the battery compartment. Continue to hold the Battery Release Slider until the battery is fully inserted.
6. Make sure the battery is completely lowered into the compartment before letting go of the Battery Release Slider. Battery will be flat against the housing once fully inserted.

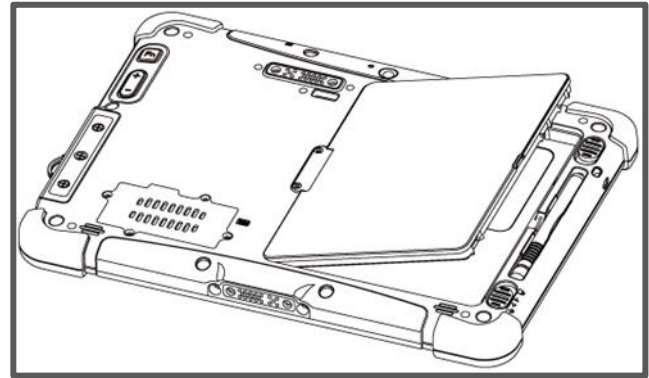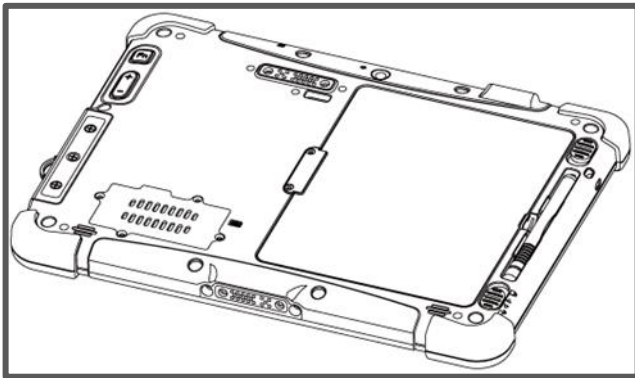

*To remove the battery pack:*

1. Shut down the tablet (or put into sleep mode). Disconnect any cords connected to the computer.
2. Turn the tablet computer over, back facing up.
3. Locate the Battery Lock Latch and push it to the “Unlocked” position.
4. Locate the Battery Release Slider that is spring-loaded. Pull back and hold.
5. Lift the battery out using the opening on the side of battery compartment.

## Charging Your Tablet

The Tablet operates either on external AC power or internal battery power. It is recommended to use AC power when you start up the Tablet for the first time.



### **Caution/Attention**

 
 
Use only the AC adapter included with your Tablet Computer. Using other AC adapters may damage the Tablet Computer and the Battery.

Utilisez uniquement l'adaptateur secteur fourni avec votre ordinateur tablette.

L'utilisation d'autres adaptateurs secteur peut endommager la tablette et la batterie.

To connect a tablet to AC power:

1. Open I/O protective cover by pulling out the latch.
2. Plug the DC cord of the AC adapter into the power jack of the tablet computer.
3. Plug the AC power cord into the AC adapter.
4. Plug the AC power cord into the electrical outlet.

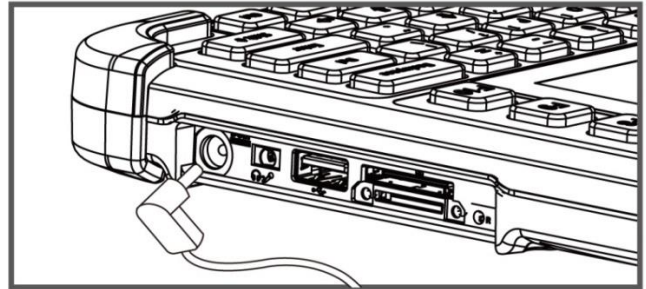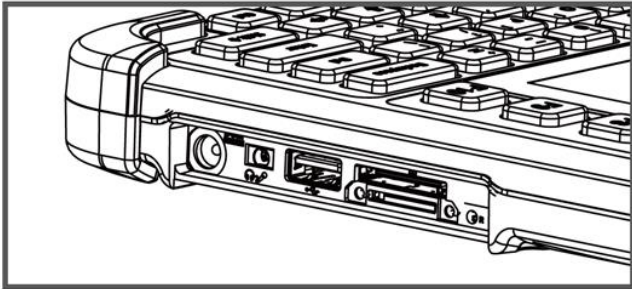

The battery LED indicator shows different battery states:

- Orange** - AC adapter is plugged in and battery is charging.
- Green** - AC adapter is plugged in and battery is fully charged.
- Solid Red** - Low battery level (<10%).
- No light** - Battery is in use and charged (>10%).

Item	Battery Life	Battery Charging Time
Standard Battery (BS101)	6 Hours	2.5 Hours
High Capacity Battery (BL101)	12 Hours	4.5 Hours

## Starting the Tablet



### Important:

When powering on the device for the first time, please make sure there's no interruption during the Windows setting up process, for example, accidentally powering off. If it happened, please access the recovery menu by pressing **F6** button on the front bezel to initiate recovery process.

Press and hold the power button for **3 seconds** until the blue LED power indicator light up.



### Note:

Do not press the power button repeatedly.

Do not perform the following operations until the Disk Activity Indicator off

- Connecting or disconnecting the AC adapter
- Pressing the power button
- Touching the tablet buttons, screen, or external keyboard/mouse

To power off the Tablet Computer:

1. Make sure you have closed any programs that are open on the Desktop. Start Screen apps don't need to be closed.
2. Tap on the **Settings** charm.
3. Tap on **Power**.
4. Tap on **Shut Down**.
5. Wait for Tablet Computer to power off.









### Note:

The computer will forcibly be powered off if the power button is pressed and held for **6 seconds or longer**.

## Operating the Device

### Using Winset Utility




Winset® is a program to control the main functions of the M101BK. In Winset you can check system information, control function button settings, and configure blanking function, scanner wedge and settings.

 
Long-press **Fn**  + **F1** function key to open Winset. You can open Win-Set by double-clicking on the Winset icon  on the desktop. The Fn key     are located on the bottom right of the keypad.



System Information	Function Buttons	Device Control	Exit
PC Information			
BIOS Version	009		
EC Version	009		
Win-Set Version	4.1.4		
OS Version	95Z0000002C4_180601		
Serial Number	1W1860005105		
Model Name	M101BK for IEC		
Battery Health	Good		
<input checked="" type="checkbox"/> Check for update	Your software is up to date.		

### Using the Camera

To take photos or videos:

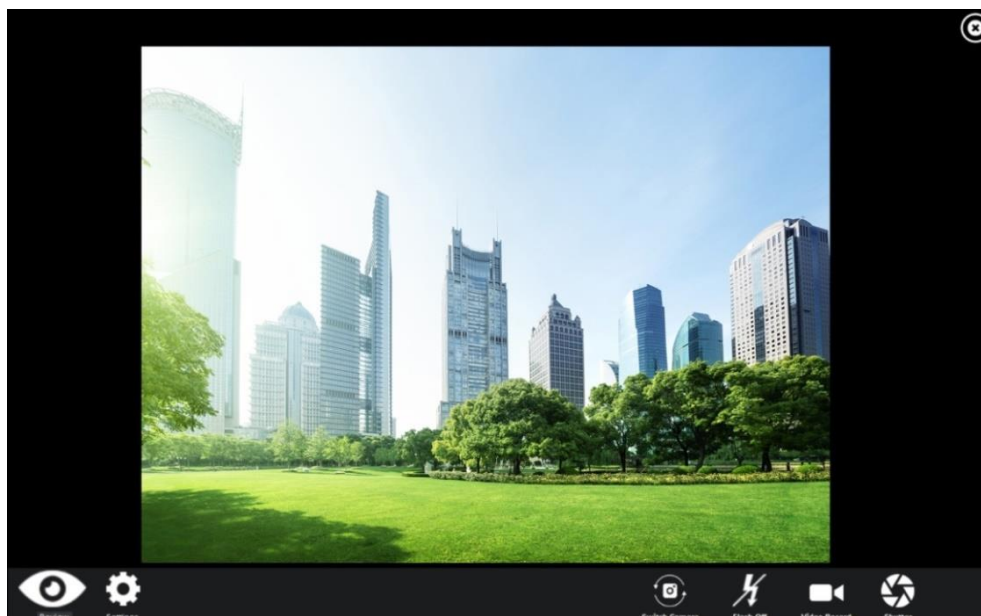1. Press **Fn+F5** function keys to open camera menu. Press the **Fn**  + **F5** hotkey located on the front panel to open camera utility.
2. Point the camera at an object.
3. Touch the on-screen shutter button  to take a photo or video record  button to record a video.



No	Item	Description
1	Review	 Review
2	Settings	 Opens Camera settings page. Available Settings: Picture Save: modify/inspect saved location for pictures. Video Save Folder: modify/inspect saved location for video recordings. Picture Quality: Picture compression quality.
3	Flash Control	 Enables/ Disables LED Flash when taking picture.
4	Video Record	 Tap to Start, and press again to stop recording.
5	Shutter Camera	 Camera Shutter Button. Tap to take picture.
6	Exit	 Exits the Camera and hide Winset utility.

## Using Bluetooth

 
Your device has integrated Bluetooth capabilities for short-range wireless communication between Bluetooth-enabled devices. You can transfer files, playback audio, configure virtual serial ports, and share network connection via Bluetooth. By default, the Bluetooth feature is enabled as indicated by the Bluetooth icon on the taskbar.

*To Enable the Wireless Bluetooth:*


1. Click the Bluetooth icon in the windows notification area, a contextual menu for Bluetooth is displayed.
2. To add a device, tap on Add a Bluetooth Device, Windows will search any Bluetooth device automatically.
3. Choose the Bluetooth device that user wants to connect and follow onscreen prompt to continue the pair procedure and use the Bluetooth device.

*Opening My Bluetooth:*

1. In the notification area in the Taskbar, click to open the Action Center button.
2. From the Quick actions area, tap the **Add a Bluetooth Devices**.

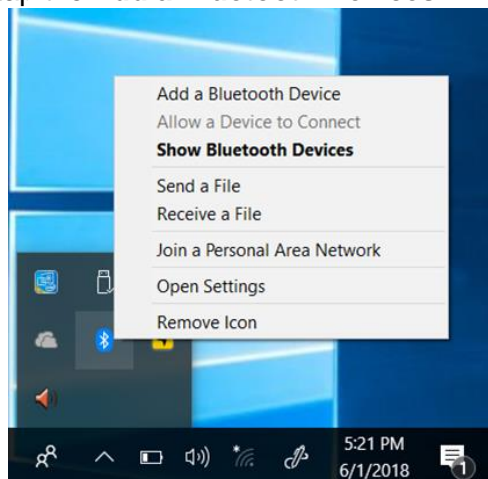

 3. Then all the enabled devices will appear in the list; click on the device, and it should pair automatically.

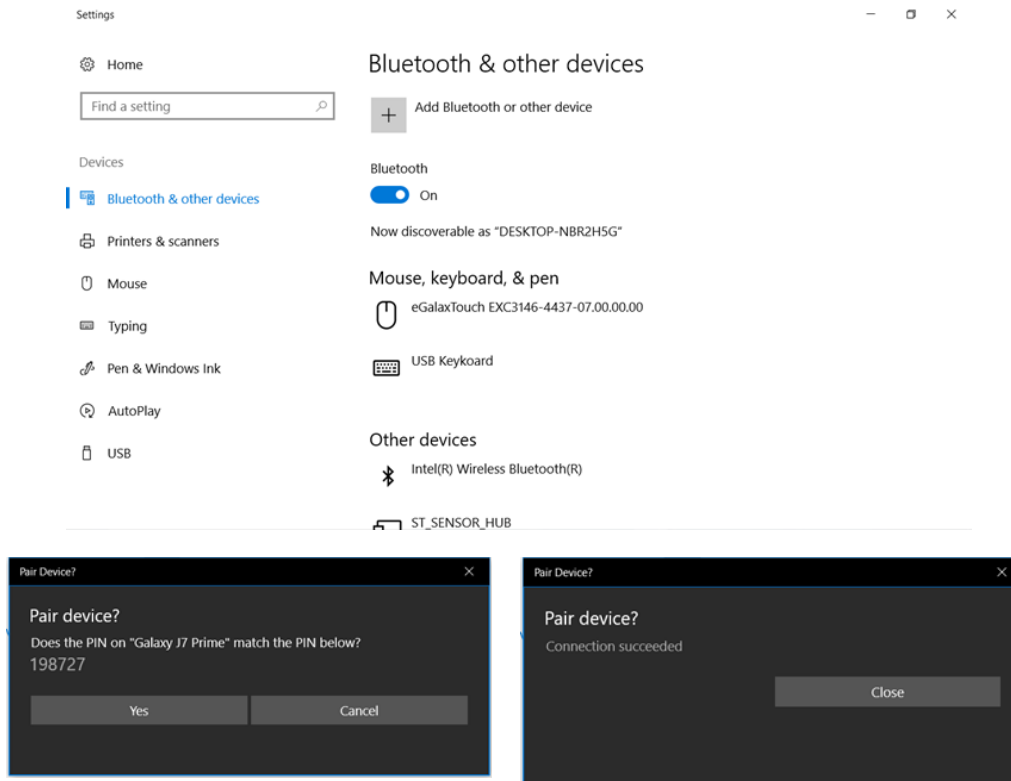


## Using Wi-Fi

By default, the wireless antenna is turned on.

*To turn on the wireless antenna:*

1. Click the wireless network connection status icon in the Windows notification area. A list of available wireless networks is displayed.
2. Double-click a network to connect to it. Provide required authentication information if needed.
3. To check the connection status, observe wireless network connection status icon in the Windows notification area. The more bars the icon shows, the better the wireless LAN connection strength is.
4. Now wireless LAN connection is setup, try connection to the network with an internet browser such as Internet Explorer.

*Perform the following to connect to a wireless network:*

1. Make sure that the wireless power is "on" (The Wi-Fi LED indicator is green and the Wireless network icon on the taskbar shows).
2. Tap the Wireless Network icon
3. In the list of available networks, tap a **Wi-Fi network** .
4. Tap Connect.
5. If the network requires authentication, enter the security key or passphrase.




Personal information and files on your wireless network can sometimes be seen by people who pick up your network signal. This can lead to identity theft and other malicious acts. A network security key or passphrase can help protect your wireless network from this type of unauthorized access.

 
 


## Using WWAN

The M101BK supports data connection with LTE modules and supports Micro-SIM cards. (Note: LTE feature is optional).

To enable WWAN:


1. Please insert the Micro-SIM card into your Tablet Computer.
2. Check the wireless WAN connection status through the Cellular status icon  in Windows notification area. The more bars encompassed, the better the signal is.
3. Click on the network title to see more details about the connection settings.

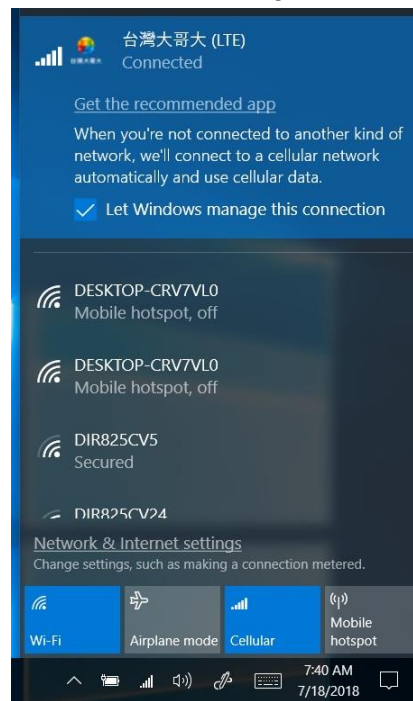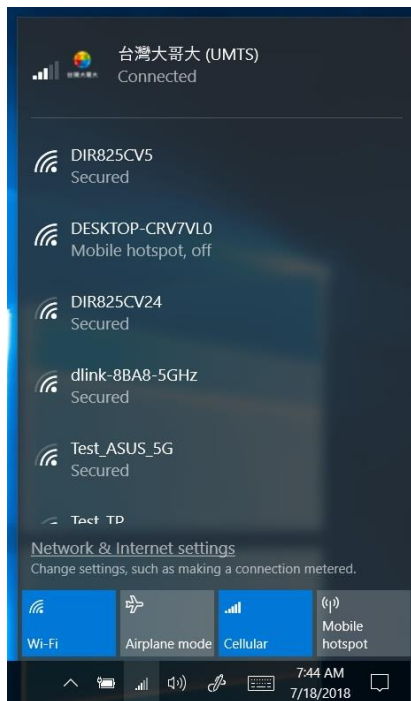


## Scanning Barcodes


Depending upon configuration, barcode scanning can be performed using the built-in 1D/2D barcode scanner (**Note:** barcode scanner is an optional feature).

To enable the Barcode Reader:

 
1. Long-press **Fn**  + **F1** function key to open Win-Set®. Users also can open Win-Set® by double-clicking on the Win-Set icon on the desktop
2. Click on the Device Control tab under the Win-Set utility and open the Barcode Scanner Wedge Settings.

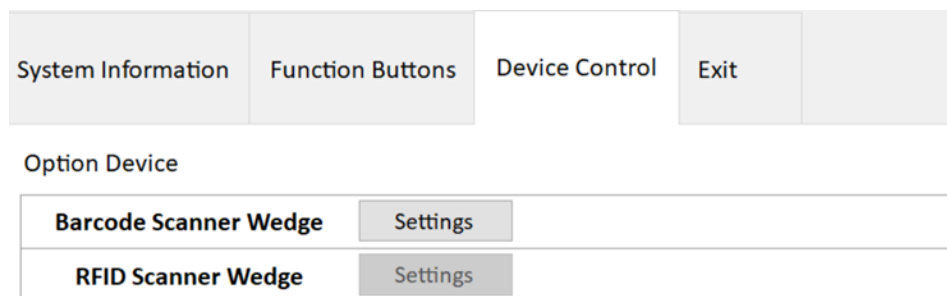

 3. Choose “**Device ON/OFF**” and click on “**Barcode**”, and the setting utility will show up as below:

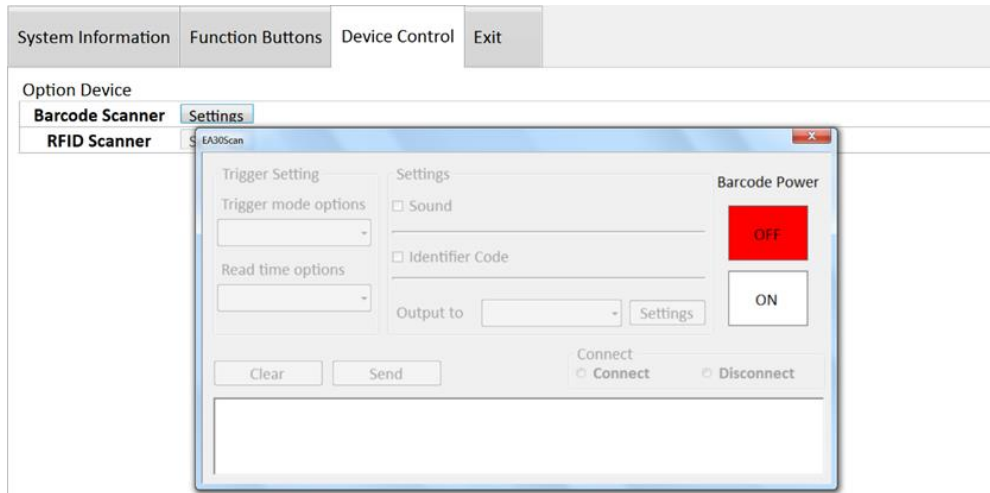

 4. Tap on the **ON** button.

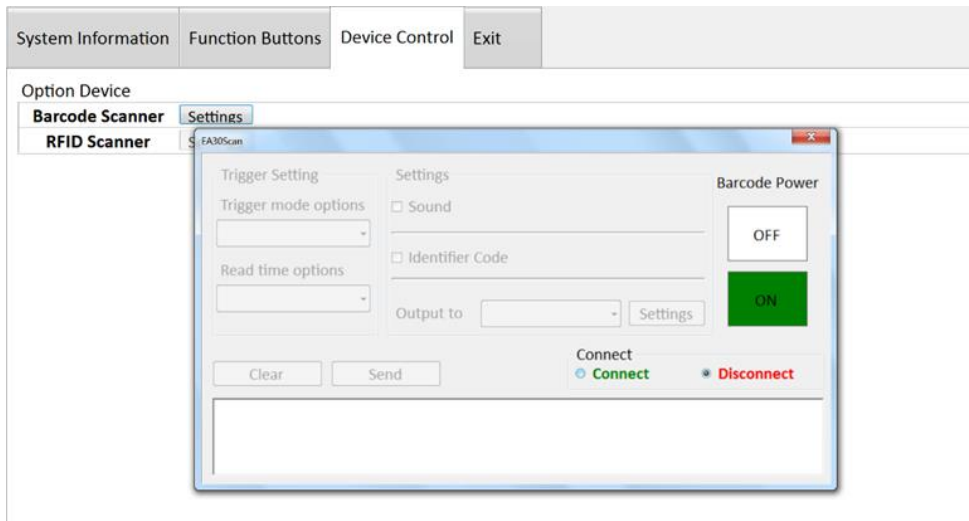

5. Open the application where barcode reader will be displaying the scanned barcode. Trigger the barcode reader by pressing **Fn2** function key on the back of M101BK.

## Replacing Hot Swappable Battery

The rugged tablet supports hot-swapping of batteries, meaning the tablet doesn't need to be powered off in order to replace the main battery. To support this there is a backup battery inside the tablet that is charged up with the main battery. This backup battery cannot be removed and needs to have adequate power for hot swapping of main battery. When the backup battery is fully charged, it can sustain up to 5 minutes of runtime to allow for battery hot-swapping.

*Perform the following to hot swap the batteries:*

1. While the tablet is powered on, open Winset to check on the power level of the Backup battery.
2. If the Backup battery level is at "Low", please charge the tablet with AC Power until the Backup battery level is at "Medium" or "High", and do not remove the main battery.
3. If the Backup battery level is at "Medium" or "High", continue to remove the main battery.
4. Insert a new charged up removable battery into the battery compartment.
5. Open Winset to check if the Main battery level can be correctly read. If not, check if the new removable battery is inserted properly.
6. If Main battery level can be read, continue to use the tablet computer.

### Caution/ Attention



To keep battery health and prevent possible issues from battery over-discharged, please charge the tablet built-in back-up battery once for every 2 months.  
 Pour préserver la santé de la batterie et éviter les problèmes de batterie déchargée, veuillez recharger la batterie de sauvegarde intégrée de la tablette une fois tous les 2 mois.

## Basic Troubleshooting

Problem	Solution
<b>The removable battery is not charging.</b>	<ul style="list-style-type: none"> <li>• Make sure the AC adapter is properly connected, and that the removable battery is properly inserted.</li> </ul>
<b>Nothing appears on the screen.</b>	<ul style="list-style-type: none"> <li>• The tablet computer may be in sleep mode. Press the power button to wake up the display.</li> <li>• The brightness level may be too low. Increase brightness.</li> </ul>
<b>The screen suddenly turns blank and the power indicator goes off.</b>	<ul style="list-style-type: none"> <li>• Make sure that LED indicator is not powered off in Win-Set.</li> <li>• Make sure the AC adapter is properly connected.</li> <li>• If running on battery power, the battery may be depleted, charge the battery.</li> </ul>
<b>Wireless LAN signal quality is poor.</b>	<ul style="list-style-type: none"> <li>• The tablet computer may be out of range. Move the tablet computer closer to the access point or another wireless LAN device associated with it.</li> <li>• Check if your surroundings have interferences, such as microwave ovens, cordless phones. Move the tablet away from objects causing interference.</li> </ul>
<b>I cannot connect to another wireless LAN device.</b>	<ul style="list-style-type: none"> <li>• Make sure that wireless LAN feature is powered on.</li> <li>• Make sure that the SSID setting is the same for every wireless LAN device in the network.</li> <li>• Restart the tablet computer.</li> <li>• Make sure the IP address or subnet mask setting is correct.</li> </ul>
<b>I cannot connect to another device with Bluetooth.</b>	<ul style="list-style-type: none"> <li>• Make sure that both devices have Bluetooth powered on in Winset).</li> <li>• Make sure that the distance between the two devices is within 10 meters and there are no walls or large obstructions between the devices.</li> <li>• Make sure the both devices are powered on and configured to be discoverable.</li> <li>• Make sure that both devices are compatible.</li> </ul>
<b>The GPS cannot find my location.</b>	<ul style="list-style-type: none"> <li>• Make sure that GPS is powered on in Winset.</li> <li>• Make sure that GPS receiver and the location sensor are enabled in Control Panel.</li> <li>• The tablet computer may be out of coverage area. Move your tablet computer outdoors or closer to a window.</li> <li>• Move the tablet computer away from objects causing interference.</li> </ul>
<b>No sound is produced.</b>	<ul style="list-style-type: none"> <li>• Adjust volume of the tablet computer by pressing on the volume rocker.</li> <li>• If using an external audio device, make sure that the cable is properly connected.</li> </ul>
<b>Barcode scanner does not emit laser beam and does not seem to work.</b>	<ul style="list-style-type: none"> <li>• Make sure the Barcode scanner device is enabled in Winset.</li> </ul>
<b>Barcode Scanner emits laser beam but does not read barcodes.</b>	<ul style="list-style-type: none"> <li>• Adjust the distance between barcode scanner of the device and the barcode being scanned.</li> <li>• Make sure the barcode code type is enabled in the tablet. Check "Barcode Scanner Configuration" section of the User Manual for more details.</li> </ul>
<b>I am having GPS accuracy issue</b>	<ul style="list-style-type: none"> <li>• When using the GPS, we recommend disabling the Barcode Reader in Winset to reduce interference.</li> </ul>

