



3) Remove the Battery

Pull the plastic strap on the battery, and then remove it.

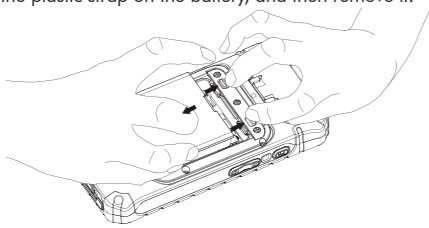

4) Insert SIM Card

Insert the SIM card (with its gold contacts facing down and cut-off corner facing inside) all the way into the SIM card slot.

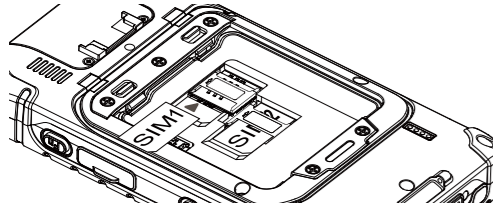


Note: Please ensure your device is powered off before swapping SIM card.

Note: Don't remove the battery for more than 30 seconds in hot swap mode or press the battery detector to avoid shutdown.


5) Insert Micro SD Card

Open the SD card holder by pushing the metal cover backward and lift it. Put the Micro SD card into the socket, close the metal cover, and push forward till it locked.

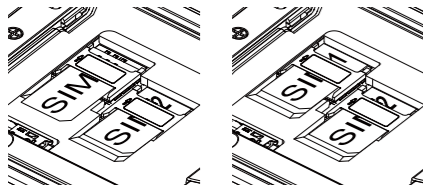


6) Put back the Battery

Reinsert the battery by latching the bottom first and then put it down.

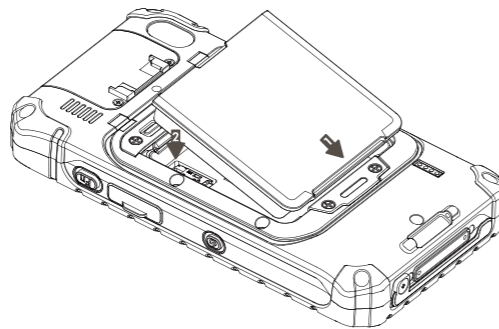

7) Check the Sealing Security.

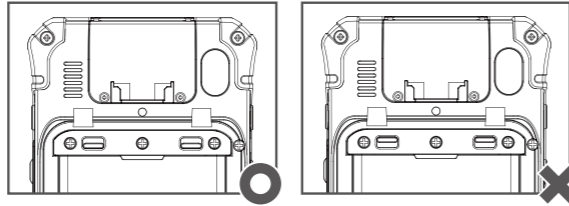

Hot swap battery


If your device has the hot swap feature, you can swap batteries without powering off your device.

Note: When hot swapping the battery the system will enter suspend mode.

Note: Don't remove the battery for more than 30 seconds in hot swap mode or press the battery detector to avoid shutdown.

To scan barcode


- 1) Tear off protective film from the barcode.
- 2) Press **Power** button located on the side and swipe up from bottom to unlock the screen.
- 3) Open **Search** application or other which can edit text.
- 4) Press **Fn** button located on the side.

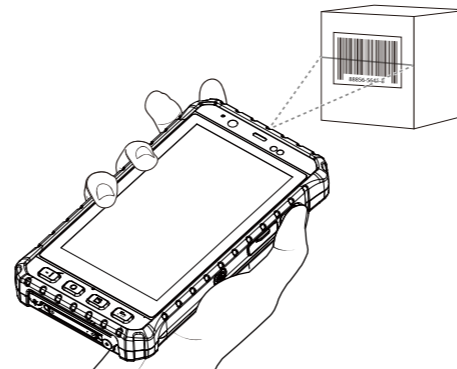

- 5) Scan the following barcode to check if your reader is working properly. Result will be displayed in Search application.



Optimum scanning

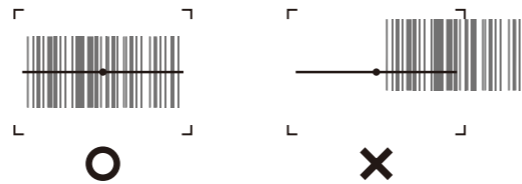

To change scanning settings

To change scanning settings

- 1) Open **WDC** application.
- 2) In **Barcode Settings** tap **Trigger Settings**.
- 3) Choose scan type and read time options.

TRIGGER MODE OPTIONS

Auto Scan – auto-scanning once the user leaves the WDC application.

Multiple Scan – continuously scanning and reading multiple codes within the read time duration (2-9 sec) after pressing **Fn** button.

Continuing Scan (Default) – scanning only the single code within the read time duration (2-9 sec) after pressing **Fn** button.

To change the symbologies of barcode

- 1) Open **WDC** application.
- 2) Tap **Barcode Setting**.
- 3) Tap **Barcode Preference**.
- 4) Change the symbologies of barcodes.

To add command with the output of barcode

- 1) Open **WDC** application.
- 2) In **Barcode Settings** tap **Prefix / Suffix**.
- 3) Enter special characters at the beginning (**prefix**) or end (**suffix**) of the scanned barcodes.
- 4) Tap **Set** to add to the data.

There's more here.

- **Keep your E500 updated, and find the latest PC software, user manual, online help and more at:**

<http://www.winmate.com/DownCenter/DownLoadCenter.asp?Do wnType=2021>

- **Find more accessories for your E500 at:**

<http://www.winmate.com/TabletPC/E500-Series.asp?showblock= Accessories>

Before starting to use E500

1) Insert Micro SD / SIM card (Optional)

The built-in storage space of your E500 series PDA is mainly used for system operation. To enable some functions need bigger storage space, such as camera or other APP, please insert a Micro SD card before using. If your E500 series PDA supports 3G, remember insert a SIM card to activate your data connection.

2) Charge the Battery

The battery in your new E500 series device is not charged yet. Please charge with the bundled USB cable before your first use.

Caution! Please don't remove the battery pack or try to take this PDA apart while the E500 is charging. These actions will result in some damages and may invalidate your warranty.

Caution! Discontinue using device immediately if you notice the battery is swelling, or looks puffy or misshapen. Do not attempt to charge or use the device. Do not handle a damaged or leaking battery. Do not let leaking battery fluid come into contact with your eyes, skin or clothing.

3) Some tips for using and caring your PDA.

Your E500 series PDA is designed to resist damages from certain rugged conditions. However, to help care for your E500, please avoid prolonged or extreme exposure to those conditions.

- ✓ To ensure the rugged design works and protects your PDA, please be sure the connector covers are closed and the back cover is screwed properly.
- ✓ Don't leave your PDA near a heat source; this can damage the device.
- ✓ Avoid dropping your PDA on a hard surface; this can potentially cause damage to the device.
- ✓ To clean your PDA, use a dry soft cloth. Don't use alcohol or other cleaning solutions.
- ✓ Please don't have your PDA contact with water when the cover is opened. The water-proof design works only when the outer case is sealed properly.

Note: Certain apps and features may not be available in all countries.

To know your E500 more

Front View (with Barcode / RFID Reader)




Back View (with Barcode / RFID Reader)



How to Start your E500

1) Charge the Battery

Use the bundled AC adapter with DC Jack to charge the PDA for 4hrs.

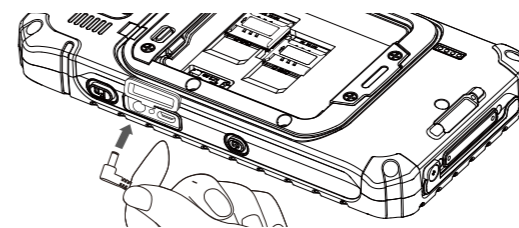


Note: We strongly recommend you always charge your E500 series PDA with its original charger. Winmate's warranty does not cover damage to the mobile device caused by other batteries and/or chargers.

Caution: To keep battery health and prevent possible issues from battery over-discharged, please charge the device built-in back-up battery once every two months.

2) Turn On the PDA

To turn on your E500 series PDA, press and hold Power button about 1 second. You can feel a slight vibration when the PDA is turned on.

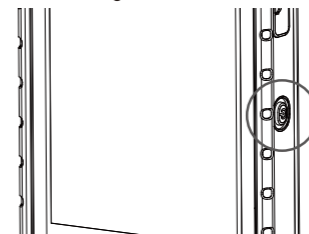


Note: For power saving purpose, please enable Connect to PC in Accessibility settings. When connected to PC, smart card reader, external 4G, fingerprint scanner will be disabled.


How to Insert SIM / Micro SD Card

1) Turn Off the PDA

Make sure the PDA is powered off and the USB cable is un-connected before you remove the back cover.

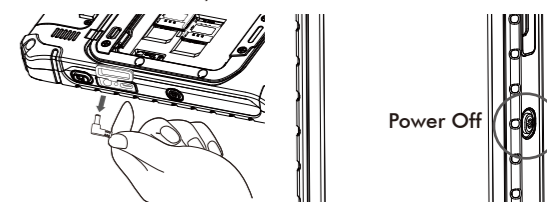

Note: To turn off your E500 series PDA under Android OS, press and hold Power button till the following window show up. Tap Power off, and then touch OK.

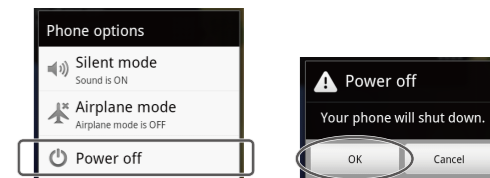

Note: You can also force the system to shutdown anytime under any operating system by holding the Power button about 8 seconds.

2) Open the Back Cover

Make the PDA facing down, and then unscrew the 6 screws. Gently pull out the back cover.

