Mounting Guide

1. VESA Mount:

• **Dimension:** 75 x 75 mm

• Screw Hole Diameter: M4 x 5 mm

• Direction:

Compatible with swimming arms mounting kits.



2. Flush Mount / Panel Mount:

• Cut Out: 157.6 x 249 mm


• Screw Hole Diameter: M3 x 4 mm


Direction:

(1) Adhere the attached gasket to panel PC back cover.

[Note] Please make sure that the eight holes on gasket can fit those mounting holes on panel PC.

- (2) Put panel PC on the pre-drilled fixture (wall or panel...) from the front, with the sides of the front bezel shown on the outside.
- (3) Fix the PPC to fixture with M3 screws.

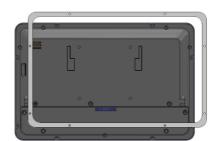

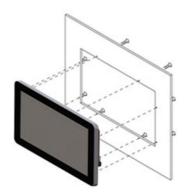

3. VESA Stand (optional):

Order Information:

Model Name: PCVS-V1

Part Number: 99KK00A0000E

Direction:

Use provided M4 screws to fix the stand to VESA holes on the panel PC back cover.



4. Winmate VESA Bracket Mount (Optional):

Order Information:


Model Name: PCVB-V1

Part Number: 99KK00A0000B

• Screw Diameter: M4 flat head (countersunk) screws

Direction:

- (1) Screw Winmate VESA Bracket to the fixture (ex. Wall) with M4 flat head screws.
- (2) Hang the 10.1" panel PC on VESA bracket. Please notice that both hooks on bracket should lock the notches on panel PC back cover.
- (3) Slightly pull down panel pc till reaching the blocker on bracket. Fix panel PC to the blocker with the M3 round head screw attached.

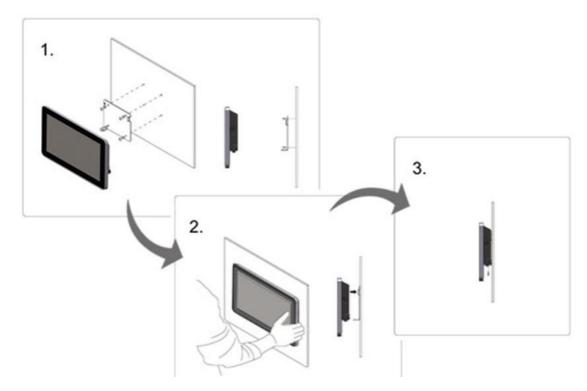

5. Front Side Wall Mount (Optional)

Order Information:

Model Name: PCFW-V1

Part Number: 99KK00A0000C **Cut Out:** 275x184x28.4 mm

• Direction:

- (1) Place the interface plate to the backside of panel PC. Fix the interface plate to the panel PC with attached M3 flat head screws.
- (2) Insert the back box in the wall open and fix with M4 tapping screws.
- (3) Connect cables and power to panel PC. Fix the striker into the roller catcher until

there is the lick sound click.

